

Komatsu Australia machine warranty summary

| | New machine (Initial 12 months unlimited hours from delivery date) whichever comes first. | Premium (36 months or 6,000 hours from delivery date) whichever comes first. | EPTW (Mining 24 months or 10,000 hours. Utility 48 months or 3,000 hours from delivery date) whichever comes first. | Used Inclusive of hybrid, iMC 1.0 and iMC 2.0 | Special hybrid component (48 months or 8,000 hours) whichever comes first. | Special intelligent machine control component iMC 1.0 and 2.0 (48 Months or 8,000 hours) whichever comes first. |
|---|---|--|---|---|--|---|
| Engine / damper | ✓ | ✓ | ✓ | ✓ | | |
| AdBlue / def injector / pump / tank / heating valve (Tier 4) | ✓ | ✓ | | | | |
| Turbocharger | ✓ | ✓ | ✓ | ✓ | | |
| Alternators / starter motors | ✓ | ✓ | | | | |
| Injectors | ✓ | ✓ | | | | |
| Fuel pump | ✓ | ✓ | ✓ | ✓ | | |
| Air compressor | ✓ | ✓ | | | | |
| Muffler | ✓ | | | | | |
| Air cleaner / precleaner | ✓ | | | | | |
| Filters | ✓ | | | | | |
| Cooling fan | ✓ | ✓ | | | | |
| Water pump | ✓ | ✓ | ✓ | ✓ | | |
| Fan drive | ✓ | ✓ | | | | |
| Radiator | ✓ | ✓ | | | | |
| Oil cooler / after cooler | ✓ | ✓ | | | | |
| Fuel tank / hydraulic tank | ✓ | ✓ | | | | |
| Chassis / frame / cabin / body | ✓ | ✓ | | | | |
| Torque converter / transmission | ✓ | ✓ | ✓ | ✓ | | |
| Steering clutches / brakes | ✓ | ✓ | ✓ | ✓ | | |
| Brake pads | ✓ | | | | | |
| Final drive / travel motor | ✓ | ✓ | ✓ | ✓ | | |
| Differential / bevel gear / pinion | ✓ | ✓ | ✓ | ✓ | | |
| Swing machinery / swing circle | ✓ | ✓ | ✓ | ✓ | | |
| Undercarriage / tyres / rims / suspension | ✓ | | | | | |
| Wear pads / track adjuster (except rod and barrel) | ✓ | | | | | |
| Hydraulic pumps (piston) | ✓ | ✓ | ✓ | ✓ | | |
| Hydraulic pumps (gear) | ✓ | ✓ | | | | |
| Hydraulic control valve | ✓ | ✓ | | | | |
| Windows / operators seat / upholstery / trimmings | ✓ | | | | | |
| Electrical items / batteries / beacons | ✓ | | | | | |
| Airconditioning | ✓ | ✓ | | | | |
| Hydraulic cylinders / track adjuster rod and barrel | ✓ | ✓ | | | | |
| Work attachment and linkages / pins / bushes | ✓ | | | | | |
| Paint | ✓ | | | | | |
| V-belts / fuels / oils / coolants / lubricants / aircon gas | | | | | | |
| Hoses / wiper blades | ✓ | | | | | |
| Universals / drive shafts | ✓ | ✓ | ✓ | ✓ | | |
| Autogreaser assy | ✓ | | | | | |
| Labour | ✓ | ✓ | ✓ | ✓ | | |
| Travel | ✓ | | | | | |
| Inverter / capacitor / generator motor / swing electric motor | ✓ | ✓ | | ✓ | ✓ | |
| Sensor IMU (Inertial Measuring Unit) - iMC 1.0 / 2.0 | ✓ | ✓ | | ✓ | | ✓ |
| Controller MC-R3 / GNSS antenna / GX-60 control box / X31 monitor- iMC 1.0 only | ✓ | ✓ | | ✓ | | ✓ |
| Controller MC-i4 / GNSS antennas (main / aux) GX-55 control box - iMC 2.0 only | ✓ | ✓ | | ✓ | | ✓ |
| Sensor assembly (cylinders: lift, angle & tilt- dozer) - iMC 1.0/2.0 | ✓ | ✓ | | ✓ | | ✓ |
| Stroke sensors (boom / arm / bucket - excavator) - iMC 1.0/2.0 | ✓ | ✓ | | ✓ | | ✓ |
| Reset sensor (lift dozer / bucket excavator) iMC 2.0 only | ✓ | ✓ | | ✓ | | ✓ |
| UR1 controller / PH700 monitor / auto-tilt IMU - iMC 2.0 only | ✓ | ✓ | | ✓ | | ✓ |

*Please refer to your machine warranty documentation for specific details of your warranty coverage.

Contact Komatsu on 1300 566 287 or visit www.komatsu.com.au

Updated: June 2022